




# Sony Cyber-shot DSC-T1 CCD Sensor Module Replacement

Written By: iDeleted

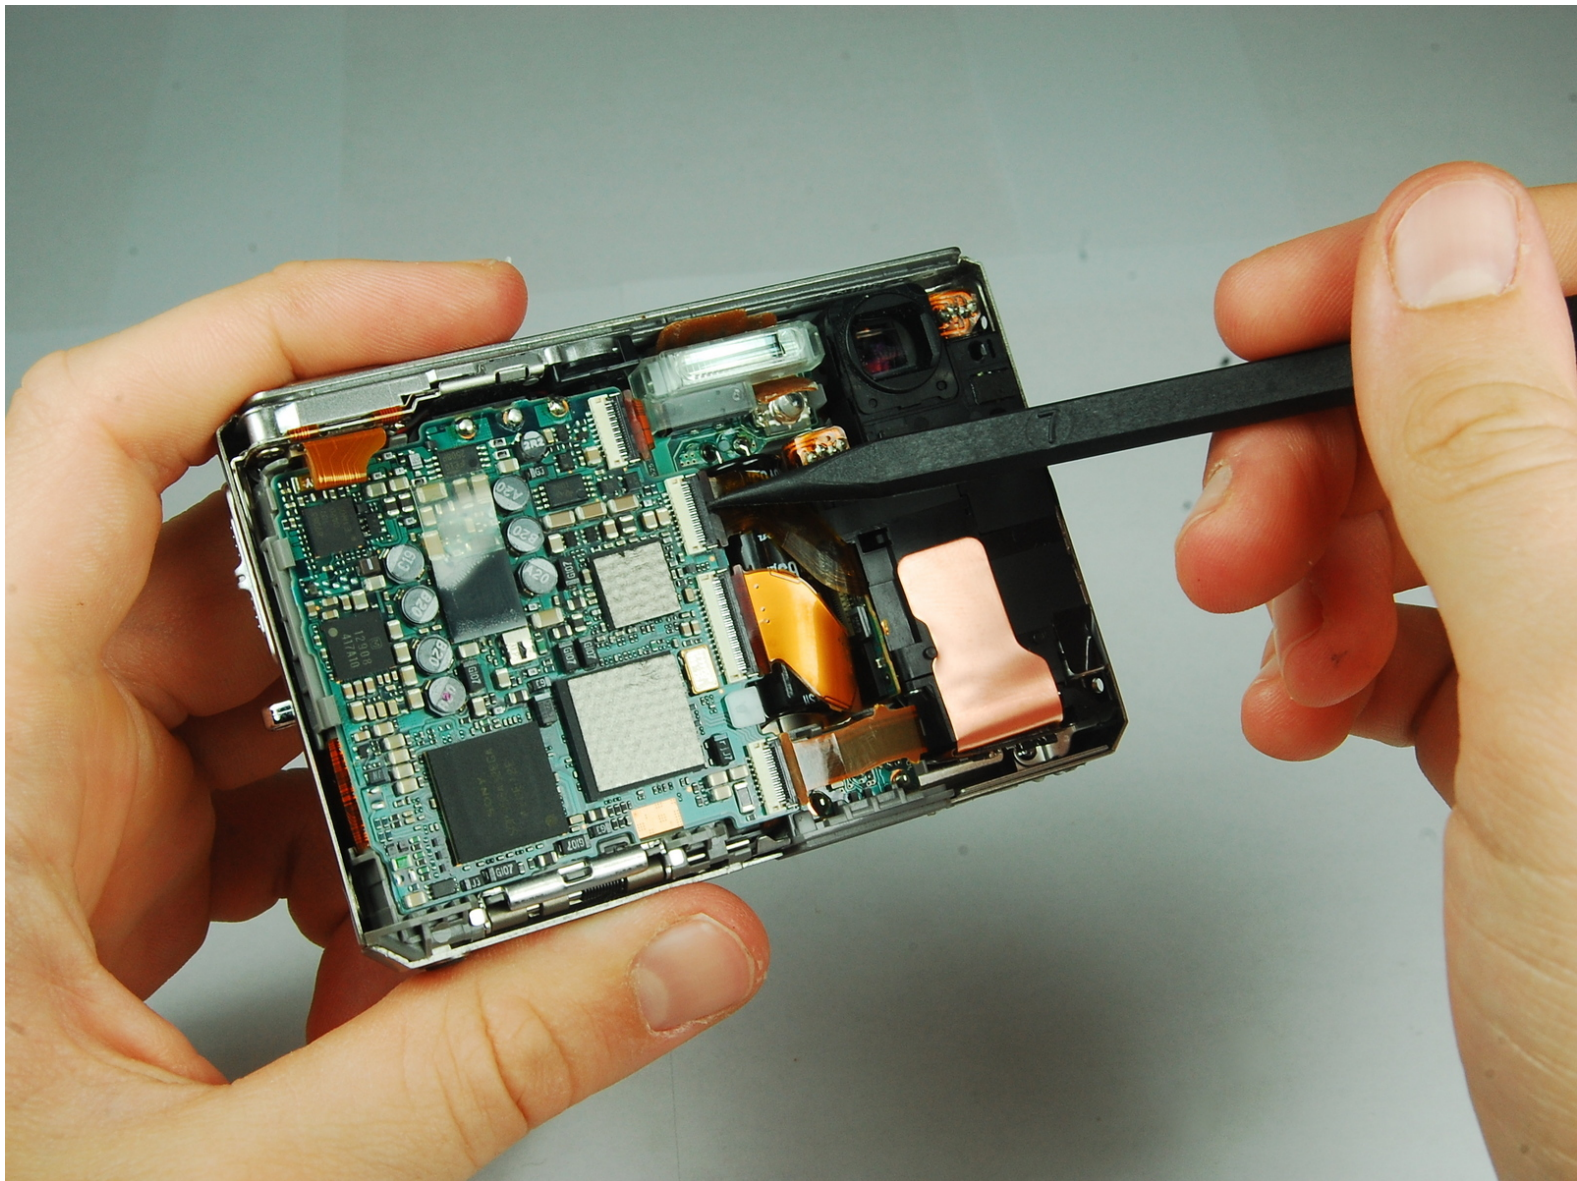

## INTRODUCTION

Is your LCD screen acting strange? Replacing the CCD Sensor Module is a straight forward task that will increase the clarity of your screen.

---




### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [Spudger](#) (1)
-




## Step 1 — Battery

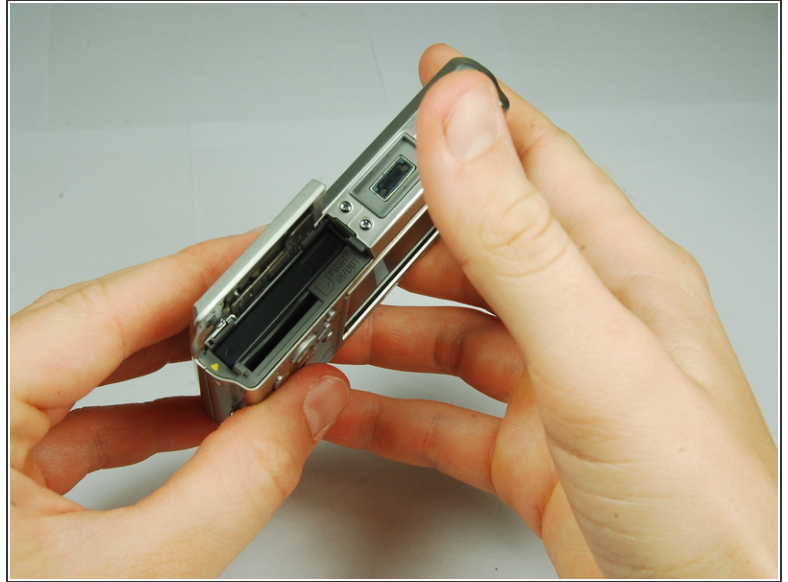

- Locate the battery cover on the bottom of the camera. Push down on the door and then, while pushing down, slide it back. It will pop open.

## Step 2

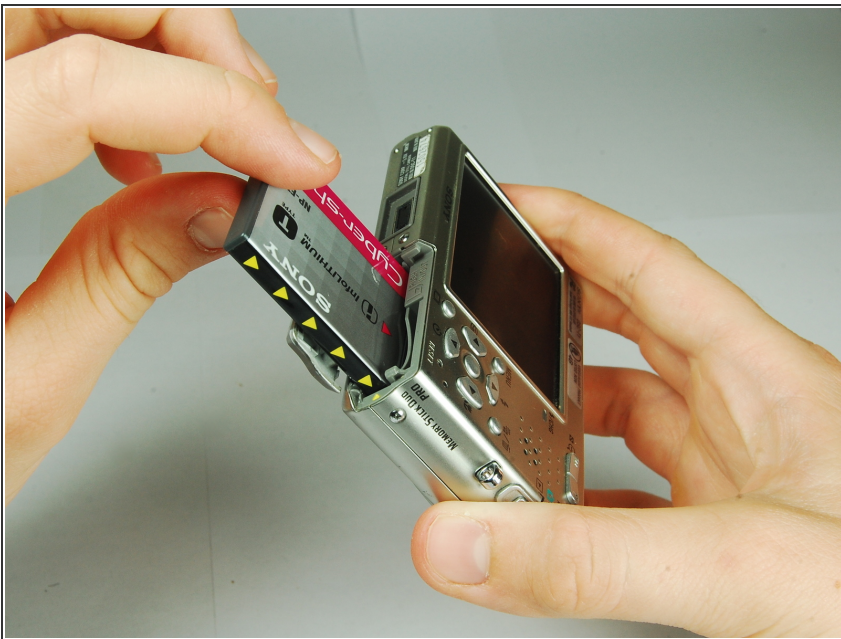


- Remove the exposed battery.

## Step 3 — Removing Front Cover



- Use a PH00 screw driver to remove the six 2.9mm phillips screws holding the back cover in place. There are two screws on the left and right sides of the camera, and two screws on the bottom.



## Step 4

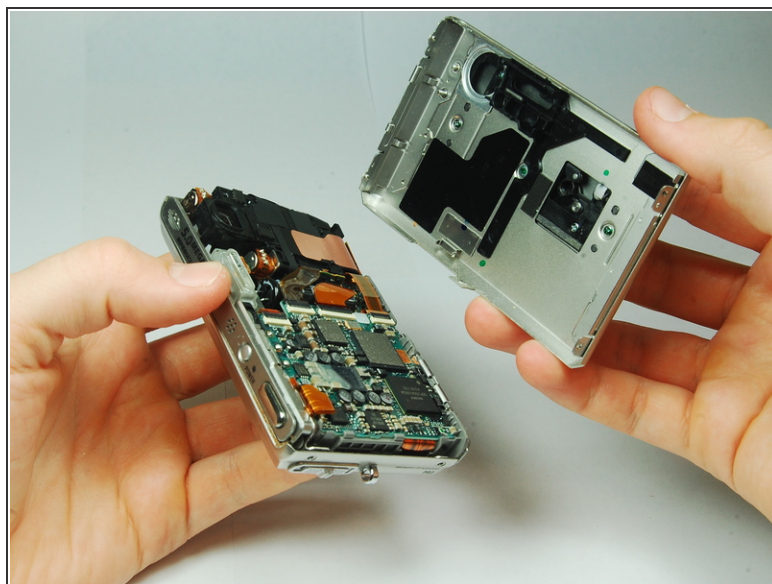

- Gently pry the front casing away from the camera.




## Step 5 — CCD Sensor Module

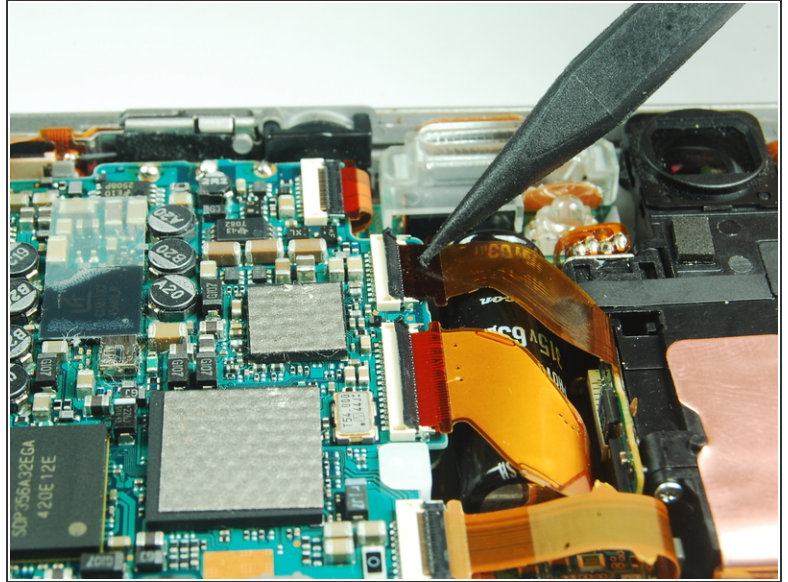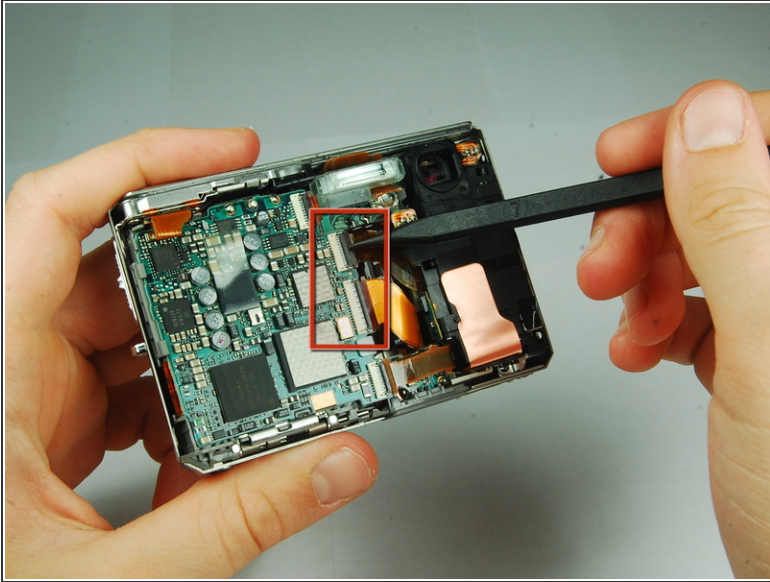

- Use the tip of a spudger to flip up the tab on the ZIF connector securing the motherboard ribbon cable.
- The second picture shows what these tabs look like in their open positions.

## Step 6

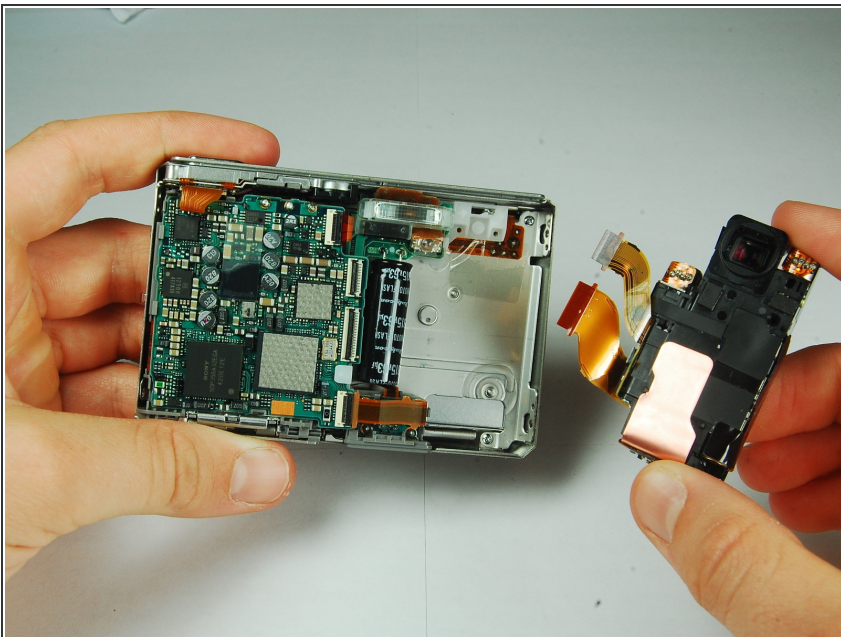

- Grasp the CCD Sensor Module and remove it.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 06:11:12 AM.